

Earth Leakage Circuit Breakers

Mounting modifications

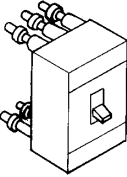
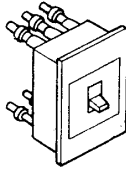
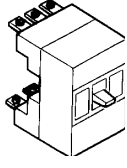
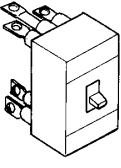
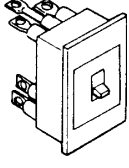
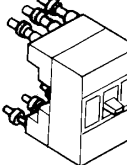
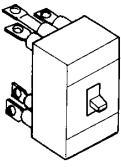
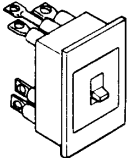
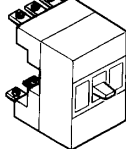
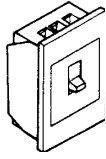
■ Mounting modifications

Standard type FUJI breakers are front mounting with front connections. The standard breaker can easily be modified to become front mounting rear connection type, flush mounting type and plug-in type. The additional parts such as insulation bases, barriers, covers and similar parts are added as required.

Standard type
Front mounting
Front connection



BASIC DESIGN

Additional main parts	Front mounting Rear connection (X type)	Additional main parts	Flush mounting Rear connection (E type)	Additional main parts	Plug-in mounting (P type)
Round stud terminal 	HG50B HG100B	Round stud terminal 	HG50B HG100B	Bar stud terminal 	SG30C EG30C SG50C EG30AC SG50RC EG50C SG60C EG50AC SG60RC EG60C EG100C EG100AC
Bar stud terminal 	SG30C EG30C SG50C EG30AC SG50RC EG50C SG60C EG50AC SG60RC EG60C EG100C EG100AC	Bar stud terminal 	SG30C EG30C SG50C EG30AC SG50RC EG50C SG60C EG50AC SG60RC EG60C EG100C EG100AC	Round stud terminal 	SG100C HG50B SG100RC HG100B
Bar stud terminal 	SG100C EG225C HG225B SG100RC EG400C HG400B SG225C EG600C HG600B SG225RC EG800C HG800B SG400C SG400RC SG600RC SG800RC Bar studs can be turned by 90°.	Bar stud terminal 	SG100C EG225C HG225B SG100RC EG400C HG400B SG225C EG600C HG600B SG225RC EG800C HG800B SG400C SG400RC SG600RC SG800RC Bar studs can be turned by 90°.	Bar stud terminal 	SG225C EG225C HG225B SG225RC EG400C HG400B SG400C EG600C HG600B SG400RC EG800C HG800B SG600RC SG800RC Bar studs can be turned by 90°.
		Additional main parts 	Flush mounting Top and bottom connection (Y type)		
			SG30C EG30C SG50C EG30AC SG50RC EG50C SG60C EG50AC SG60RC EG60C EG100C EG100AC		